

Exploded Diagram

Main Assembly

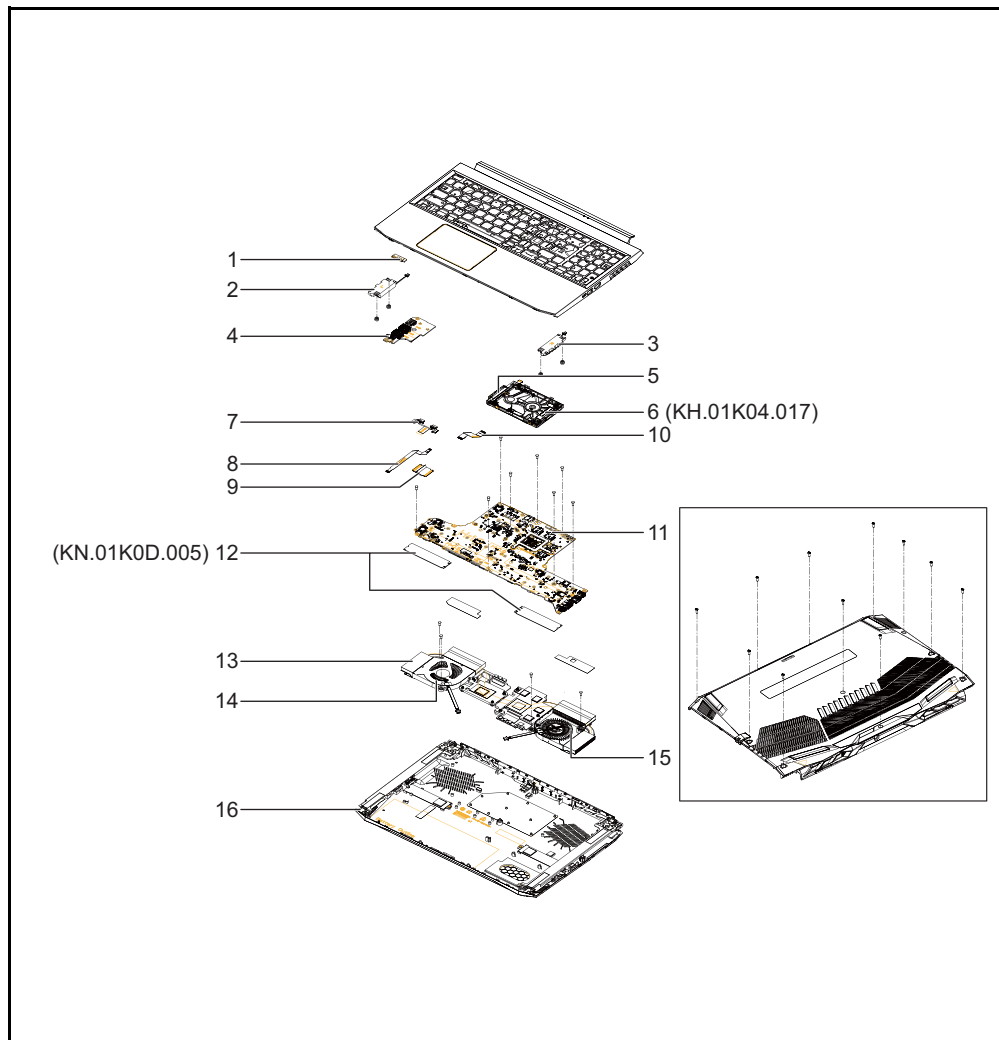


Figure 6-1. Main Assembly Exploded Diagram (N18P-G61-A/GN20-P0/P0-D/GN20-P1)

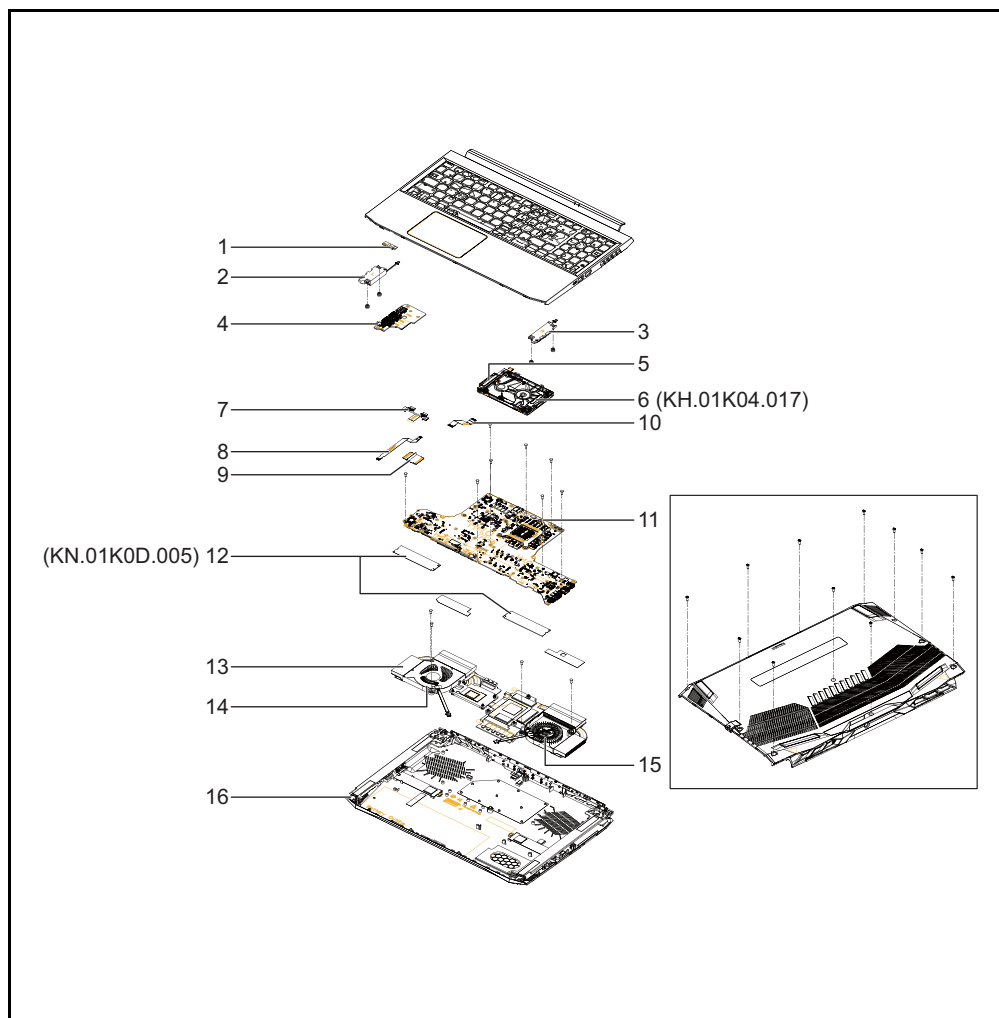


Figure 6-2. Main Assembly Exploded Diagram (GN20-E3/E5)

Table 6-1. Main Assembly Exploded Diagram

No.	Description	P/N
1	HALL SENSOR BOARD	55.QBAN2.002
2	SPEAKER L	23.Q7KN2.003
3	SPEAKER R	23.Q7KN2.004
4	IO BOARD FOR VGA N18P-G61-A & GN20P0/P1	55.QB9N2.001
5	FFC CABLE FOR HDD	50.QBAN2.004
6	HDD TOSHIBA 2.5" 5400rpm 1000GB MQ04ABF100 , 1TB/P, acer code SATA III 128MB LF+HF F/W:JU002J	KH.01K04.017
7	WIRE CABLE FOR IO BOARD	50.Q7KN2.003
8	FFC CABLE FOR SENSOR BOARD	50.QBTN2.001
9	FFC CABLE FOR IO BOARD	50.QBAN2.001

No.	Description	P/N
10	FFC CABLE FOR TP	50.QBAN2.003
11	Mainboard AN515-57 Intel Ci511260H HM570 N18PG61-A 4GB LG05P_N14BRL	NB.QBW11.001
12	Flash Disk SANDISK SSD NAND 1024GB BiCS4 SN530 SDBPNPZ-1T00-1114 LF+HF	KN.01K0D.005
13	THERMAL MODULE DIS W/O FAN FOR GN20-P1/P0	24.QCCN2.001
14	FAN FOR CPU	23.QB9N2.001
15	FAN FOR VGA	23.QB9N2.002
16	LOWER CASE ASSY - BLACK	60.QBAN2.001

Upper Case Assembly

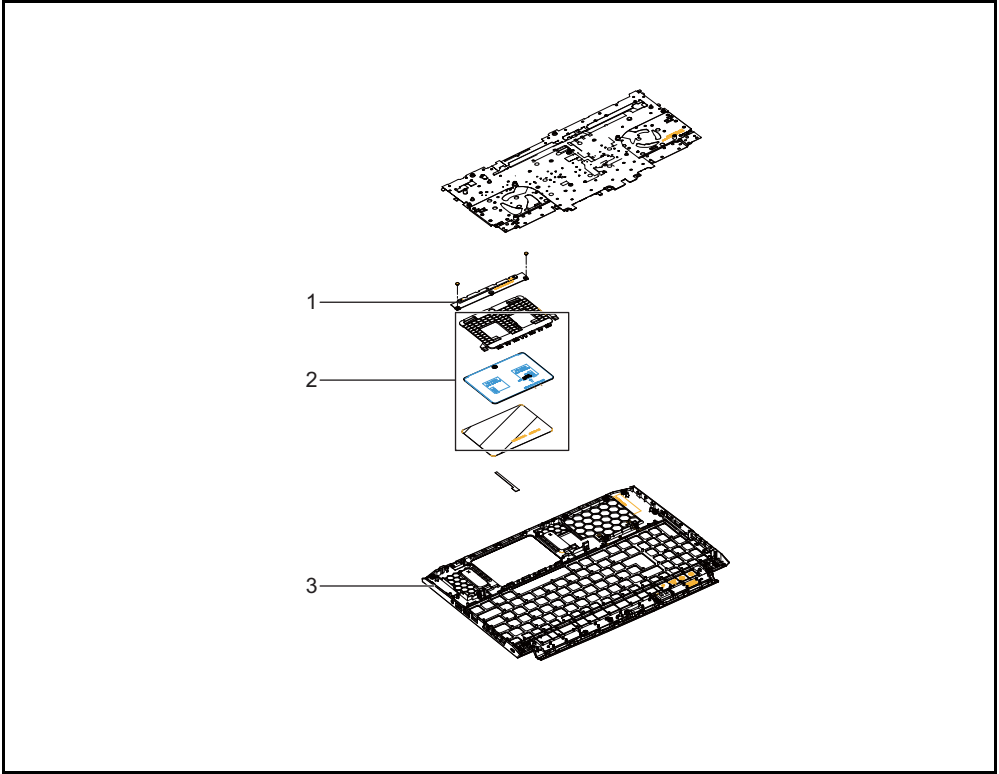


Figure 6-3. Upper Case Assembly Exploded Diagram

Table 6-2. Upper Case Assembly Exploded Diagram

No.	Description	P/N
1	TOUCHPAD SUPPORT BRACKET	33.Q8FN2.001
2	TOUCHPAD ASSY BLACK-ELANTECH,NC.24611.06H	56.QBAN2.001
3	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black US International Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DV)	6B.QBZN2.001

LCD Assembly

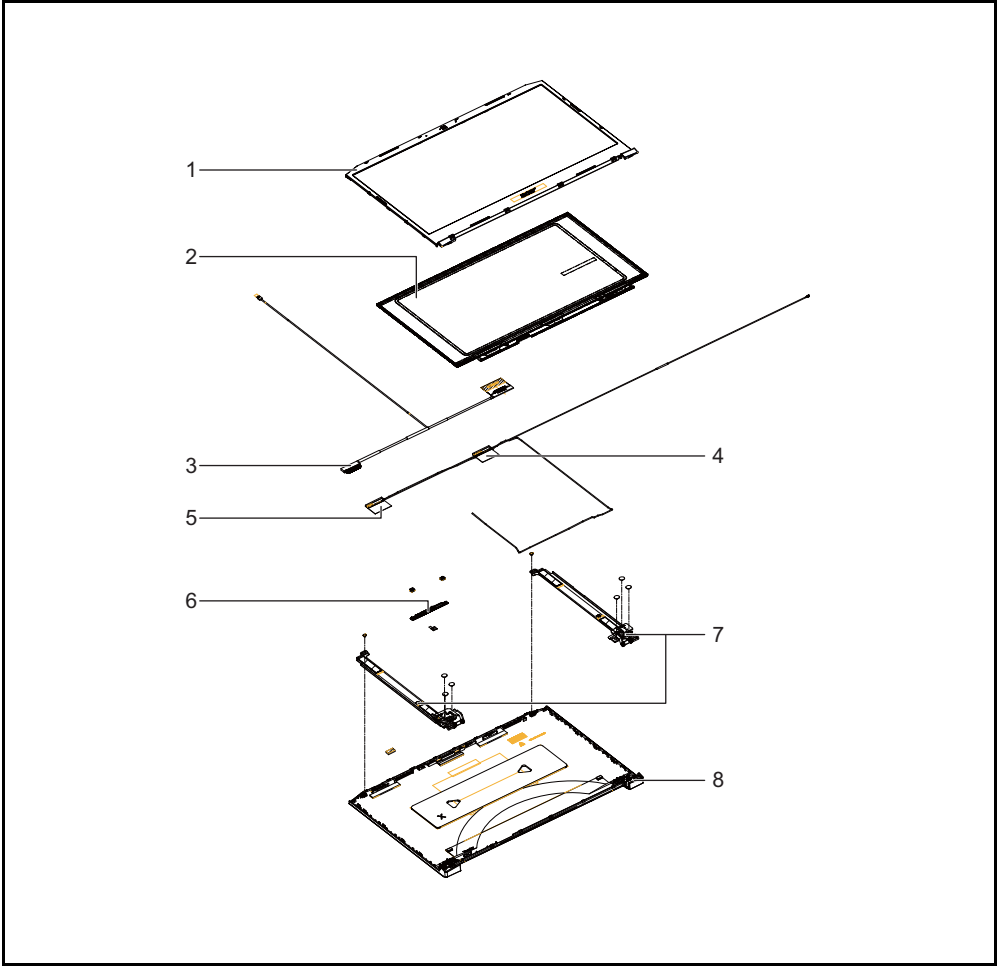


Figure 6-4. LCD Assembly Exploded Diagram

Table 6-3. LCD Assembly Exploded Diagram

No.	Description	P/N
1	LCD BEZEL BLACK	60.Q7KN2.003
2	LED LCD Panel LPL 15.6"W FHD None Glare LP156WFG-SPF3 LF 300nit 5ms GTG 800:1 (eDP,IPS,144Hz,OD 3ms GTG,narrow border,2.6t max)	KL.15608.041
3	LCD EDP CABLE FOR 60HZ	50.Q7KN2.011
4	ANTENNA WLAN - MAIN	50.Q7KN2.009
5	ANTENNA WLAN - AUX	50.Q7KN2.010
6	Camera CHICONY HD Camera HD Camera CH_OV9734_RTS5846N_AOET_SPK0493 Unified2 (add Mic*2)	KS.0HD06.012
7	LCD HINGE L FOR 3.2T	33.QBAN2.001
	LCD HINGE R FOR 3.2T	33.QBAN2.002

Table 6-3. LCD Assembly Exploded Diagram

No.	Description	P/N
8	LCD COVER ASSY - IMR BLACK FOR 3.2T	60.QBAN2.002

FRU List

Table 6-4. FRU List

CATEGORY	Acer Description	AcerPN
BOARD		
	IO BOARD FOR VGA N18P-G61-A & GN20P0/P1	55.QB9N2.001
	IO BOARD FOR VGA GN20E SKU	55.QBAN2.001
	HALL SENSOR BOARD	55.QBAN2.002
CABLE		
	FFC CABLE FOR IO BOARD	50.QBAN2.001
	FFC CABLE FOR SENSOR BOARD	50.QBTN2.001
	WIRE CABLE FOR IO BOARD	50.Q7KN2.003
	FFC CABLE FOR TP	50.QBAN2.003
	FFC CABLE FOR HDD	50.QBAN2.004
	ANTENNA WLAN - MAIN	50.Q7KN2.009
	ANTENNA WLAN - AUX	50.Q7KN2.010
	LCD EDP CABLE FOR 60HZ	50.Q7KN2.011
	LCD EDP CABLE FOR 120 & 144HZ	50.Q7KN2.012
	LCD EDP CABLE FOR 165HZ	50.QCCN2.001

CATEGORY	Acer Description	AcerPN
	POWER CORD 1M BLACK SOUTH AFRICA - NEW	27.HEEN2.001
	POWER CORD 1M BLACK BLACK AUSTRALIA	27.Q28N2.002
	POWER CORD 1M BLACK EU	27.Q28N2.003
	POWER CORD 1M BLACK EU(New source)	27.Q7DN2.001
	POWER CORD 1M BLACK DENMARK	27.Q28N2.004
	POWER CORD 1M BLACK ISRAEL	27.Q28N2.005
	POWER CORD 1M BLACK ITALIAN	27.Q28N2.006
	POWER CORD 1M BLACK JAPAN	27.Q28N2.007
	POWER CORD 1M BLACK CHINA - NEW	27.HEEN2.002
	POWER CORD 1M BLACK INDIA	27.Q28N2.009
	POWER CORD 1M BLACK SWISS	27.Q28N2.010
	POWER CORD 1M BLACK UK	27.Q28N2.011
	POWER CORD 1M BLACK UK(New source)	27.Q7DN2.002
	POWER CORD 1M BLACK TWN	27.Q28N2.012
	POWER CORD 1M BLACK ARGENTINA - NEW	27.HEEN2.003
	POWER CORD 1M BLACK KOREA	27.Q28N2.014
	POWER CORD 1M BLACK US	27.Q28N2.015
	POWER CORD 1M BLACK US(New source)	27.Q7DN2.003
	POWER CORD 1M BLACK BRAZIL	27.Q28N2.016
CASE/COVER/BACKET ASSEMBLY		
	TOUCHPAD SUPPORT BRACKET	33.Q8FN2.001
	LOWER CASE ASSY - BLACK	60.QBAN2.001
	HDD BRACKET	33.Q7LN2.001

CATEGORY	Acer Description	AcerPN
	LCD COVER ASSY - IMR BLACK FOR 3.2T	60.QBAN2.002
	LCD COVER ASSY - IMR BLACK FOR 2.6T	60.QBAN2.003
	LCD COVER ASSY 3.2T FOR PAP	60.QCCN2.001
	LCD COVER ASSY 2.6T FOR PAP	60.QCCN2.002
	LCD BEZEL BLACK	60.Q7KN2.003
	LCD HINGE L FOR 3.2T	33.QBAN2.001
	LCD HINGE R FOR 3.2T	33.QBAN2.002
	LCD HINGE L FOR 2.6T	33.QBAN2.003
	LCD HINGE R FOR 2.6T	33.QBAN2.004
FAN		
	FAN FOR CPU	23.QB9N2.001
	FAN FOR VGA	23.QB9N2.002
HEATSINK		
	THERMAL MODULE DIS W/O FAN FOR GN20-P1/P0	24.QCCN2.001
	THERMAL MODULE DIS W/O FAN FOR GN20-E3/E5	24.QCCN2.002
KEYBOARD ASSEMBLY		
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black US International Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DV)	6B.QBZN2.001

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Greek Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DP)	6B.QBZN2.002
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Arabic Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DM)	6B.QBZN2.003
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Traditional Chinese Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DN)	6B.QBZN2.004
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Russian Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DR)	6B.QBZN2.005
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black US International w/ Hebrew Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DW)	6B.QBZN2.006
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Thailand Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DU)	6B.QBZN2.007
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Korean Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DQ)	6B.QBZN2.008
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Ukrainian Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DS)	6B.QBZN2.009
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N12B3L LG5P Internal 15 Standard 103KS Black Persian Predator Font+Nitro RGB 4-Zone V0 LED indicator,NK.I1513.1DT)	6B.QBZN2.010

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Hebrew Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B2,NK.I1517.0HT)	6B.QAMN2.006
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Thailand Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B0,NK.I1517.0HR)	6B.QAMN2.007
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Korean Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AW,NK.I1517.0HM)	6B.QAMN2.008
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Ukrainian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AY,NK.I1517.0HP)	6B.QAMN2.009
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Persian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AZ,NK.I1517.0HQ)	6B.QAMN2.010
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Canadian French Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B3,NK.I1517.0HU)	6B.QAMN2.011
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Bulgaria Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B4,NK.I1517.0HV)	6B.QAMN2.012
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black UK Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BP,NK.I1517.0JE)	6B.QAMN2.013
	UPPER CASE ASSY IMR W/BL BLACK FOR GTX1650 & GN20(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black German Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BC,NK.I1517.0J3)	6B.QAMN2.014

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Greek Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CR)	6B.QCCN2.002
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Arabic Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CP)	6B.QCCN2.003
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Traditional Chinese Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CQ)	6B.QCCN2.004
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Russian Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CT)	6B.QCCN2.005
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black US International w/ Hebrew Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CY)	6B.QCCN2.006
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Thailand Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CW)	6B.QCCN2.007
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Korean Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CS)	6B.QCCN2.008
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Ukrainian Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CU)	6B.QCCN2.009
	UPPER CASE ASSY IMR W/BL RGB FOR GN20-E3/E5(Keyboard LG05P_P12B3L LG5P Internal 15 Standard 103KS Black Persian Predator Font RGB 4-Zone V0 LED indicator,NK.I1513.1CV)	6B.QCCN2.010

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Hebrew Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B2,NK.I1517.0HT)	6B.QBTN2.006
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Thailand Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B0,NK.I1517.0HR)	6B.QBTN2.007
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Korean Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AW,NK.I1517.0HM)	6B.QBTN2.008
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Ukrainian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AY,NK.I1517.0HP)	6B.QBTN2.009
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black Persian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1AZ,NK.I1517.0HQ)	6B.QBTN2.010
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Canadian French Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B3,NK.I1517.0HU)	6B.QBTN2.011
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 103KS Black US International w/ Bulgaria Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B4,NK.I1517.0HV)	6B.QBTN2.012
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black UK Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BP,NK.I1517.0JE)	6B.QBTN2.013
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black German Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BC,NK.I1517.0J3)	6B.QBTN2.014

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Swiss/G Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BM,NK.I1517.0JC)	6B.QBTN2.015
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Belgium Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B6,NK.I1517.0HX)	6B.QBTN2.016
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Danish Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B9,NK.I1517.0J0)	6B.QBTN2.017
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Italian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BE,NK.I1517.0J5)	6B.QBTN2.018
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black French Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BB,NK.I1517.0J2)	6B.QBTN2.019
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Hungarian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BD,NK.I1517.0J4)	6B.QBTN2.020
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Norwegian Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BG,NK.I1517.0J7)	6B.QBTN2.021
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Portuguese Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BH,NK.I1517.0J8)	6B.QBTN2.022
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Spanish Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BK,NK.I1517.0JA)	6B.QBTN2.023

CATEGORY	Acer Description	AcerPN
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Turkish Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BN,NK.I1517.0JD)	6B.QBTN2.024
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Sweden Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BL,NK.I1517.0JB)	6B.QBTN2.025
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black FR/Arabic Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BA,NK.I1517.0J1)	6B.QBTN2.026
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Nordic Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BF,NK.I1517.0J6)	6B.QBTN2.027
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black SLO/CRO Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1BJ,NK.I1517.0J9)	6B.QBTN2.028
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black CZ/SK Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B8,NK.I1517.0HZ)	6B.QBTN2.029
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black Brazilian Portuguese Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B7,NK.I1517.0HY)	6B.QBTN2.030
	UPPER CASE ASSY IMR W/BL RED FOR GN20-E3/E5(Keyboard LG05P_N14BRL LG5P Internal 15 Standard 104KS Black ALA-Spanish Predator Font+Nitro Red Backlit V0 LED indicator,NK.I1513.1B5,NK.I1517.0HW)	6B.QBTN2.031
MAINBOARD		
	Mainboard AN515-57 Intel Ci511260H HM570 N18PG61-A 4GB LG05P_N14BRL	NB.QBW11.001
	Mainboard AN515-57 Intel Ci511260H HM570 N18PG61-A 4GB LG05P_N12B3L	NB.QCF11.001

CATEGORY	Acer Description	AcerPN
 	Mainboard AN515-57 Intel Ci511400H HM570 N18PG61-A 4GB LG05P_N14BRL	NB.QBW11.002
	Mainboard AN515-57 Intel Ci511400H HM570 N18PG61-A 4GB LG05P_N12B3L	NB.QCF11.002
	Mainboard AN515-57 Intel Ci711800H HM570 N18PG61-A 4GB LG05P_N14BRL	NB.QBW11.003
	Mainboard AN515-57 Intel Ci711800H HM570 N18PG61-A 4GB LG05P_N12B3L	NB.QCF11.003
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P0 4GB LG05P_N14BRL	NB.QBU11.001
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P0 4GB LG05P_N12B3L	NB.QCD11.001
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P0 4GB LG05P_N14BRL	NB.QBU11.002
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P0 4GB LG05P_N12B3L	NB.QCD11.002
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P0 4GB LG05P_N14BRL	NB.QBU11.003
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P0 4GB LG05P_N12B3L	NB.QCD11.003
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N14BRL	NB.QBU11.004
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N12B3L	NB.QCD11.004
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N14BRL	NB.QBU11.005
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N12B3L	NB.QCD11.005
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N14BRL	NB.QBU11.006
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P0 4GB (GN20-P0-D) LG05P_N12B3L	NB.QCD11.006
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P1 4GB LG05P_N14BRL	NB.QBV11.001
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-P1 4GB LG05P_N12B3L	NB.QCE11.001
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P1 4GB LG05P_N14BRL	NB.QBV11.002
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-P1 4GB LG05P_N12B3L	NB.QCE11.002

CATEGORY	Acer Description	AcerPN
 	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P1 4GB LG05P_N14BRL	NB.QBV11.003
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-P1 4GB LG05P_N12B3L	NB.QCE11.003
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-E3 6GB LG05P_N14BRL	NB.QBT11.001
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-E3 6GB LG05P_N12B3L	NB.QCC11.001
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-E3 6GB LG05P_N14BRL	NB.QBT11.002
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-E3 6GB LG05P_N12B3L	NB.QCC11.002
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-E3 6GB LG05P_N14BRL	NB.QBT11.003
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-E3 6GB LG05P_N12B3L	NB.QCC11.003
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-E5 8GB LG05P_N14BRL	NB.QCG11.001
	Mainboard AN515-57 Intel Ci511260H HM570 GN20-E5 8GB LG05P_N12B3L	NB.QCB11.001
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-E5 8GB LG05P_N14BRL	NB.QCG11.002
	Mainboard AN515-57 Intel Ci511400H HM570 GN20-E5 8GB LG05P_N12B3L	NB.QCB11.002
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-E5 8GB LG05P_N14BRL	NB.QCG11.003
	Mainboard AN515-57 Intel Ci711800H HM570 GN20-E5 8GB LG05P_N12B3L	NB.QCB11.003
POINT DEVICE		
	TOUCHPAD ASSY BLACK-ELANTECH,NC.24611.06H	56.QBAN2.001
	TOUCHPAD ASSY BLACK-SYNAPTICS, NC.24611.05J	56.QBAN2.002
SPEAKER		
	SPEAKER L	23.Q7KN2.003

CATEGORY	Acer Description	AcerPN
	SPEAKER R	23.Q7KN2.004
MISCELLANEOUS		
	RUBBER FOR MIS	47.Q7KN2.001
	CONDUCTIVE TAPE FOR TP	47.Q7KN2.002
	BATT_ACETATE_TAPE	47.Q7KN2.007
	LCD PANEL ADHESIVE FOR 3.2T	47.Q7KN2.004
	LCD PANEL ADHESIVE FOR 2.6T	47.Q7KN2.005
	LCD ALIGNMENT MYLAR 10x5x0.4mm	47.Q55N2.002

Screw List

Table 6-5. Screw List

CATEGORY	Description	Part No.
SCREWS		
	SCREW 2.0D 2.5L K 5D 0.5T NI NL	86.H14N2.001
	SCREW 2.5D 2.5L K 8D 0.6T ZK NL	86.H14N2.002
	SCREW 2.5D 5.0L K 4.6D NI NL	86.H14N2.003
	SCREW 2.5D 6L K 4.6D .8T BNI-ZN NL	86.Q5EN2.001
	SCREW M M 2.0D 4.0L K 4.6D BNI NL	86.Q99N2.001
	SCREW 2.0D 3.0L K 4.6D ZK NL CR3	86.Q1RN2.006
	SCREW 3.0D 4.0L K 4.6D BNI	86.HZWN2.001